




Package Contents

- H3-EM-68-x00 Electronic Swinghandle with Proximity Reader (qty1)
- EM-0-45827 M3x25 POZIDRIV® Mounting Screws (qty 4)
- EM-0-47151 M3x14 POZIDRIV® Mounting Screw (qty 1)
- EM-0-45825 Rotation Limiter (qty 1)
- EM-0-58124 Rotation Limiter (qty1)
- E5-C-04 Pawl Screw (qty 1)
- M3-0-24943-11 Lock Plug Screw (qty 1) (optional)
- EM-0-45826 Top Mounting Bracket (qty 1)
- EM-0-45822 Bottom Mounting Bracket (gty 1)
- Operating Instructions (qty 1)

H3-EM-68-x00 Electronic Swinghandle with Proximity Reader

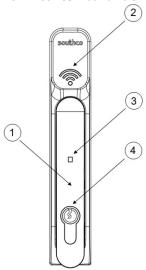

- 1. Handle
- 2. Prox Reader
- 3. Tri-Color Status LED
- 4. Lock Plug (optional)

Features

- Installed 125kHz proximity reader module with Wiegand data output
- Remote lock and unlock capability
- Single or multi-point lock actuation
- Momentary or continuous lock actuation
- Tri-color LED (blue/magenta/red) to indicate lock and handle status
- DIN lock manual override
- · Accommodates both left and right doors
- For indoor use only

WARNING: The H3-EM-68-000 is shipped without a lockplug. This product must be paired with a Southco-approved lock to function properly. Use with an unapproved lockplug voids the product warranty. Contact Southco for additional support.

Specifications

Actuator Module

Supply Voltage (V_{SUPPLY}): 12VDC to 24VDC (**NOTE**: Status LED will blink

red if the supply voltage is out of range.)

Standby Current: 50mA maximum at 12VDC

Operating Current: 200mA maximum at 12VDC (with no external

mechanical load applied to handle

Stall Current: 1A maximum (at 12VDC, limited to 2 seconds)
Operating Transit Time: 1 second maximum (**NOTE**: Power must be

present during transit times. If power is removed while the lock slide is in transit, it will

complete it's cycle when power is

restored.)

Electronic Unlock Time: 3 seconds minimum

Open Collector Outputs: Rated for V_{SUPPLY}, maximum load

Proximity Reader Module

Supply Voltage (Vcc): 12VDC to 24VDC

Operating Current: 20mA maximum (no external devices

attached)

Transmit Frequency: 125kHz FSK DATA Signal Voltage: 5VDC DATA Pulse Interval Time:40µs DATA Signal Delay: 2ms

Mounting and Installation


Please refer to Southco trade drawing J-H3-EM-68-100 for mounting and installation details.

NOTE: Use a #1 POZIDRIV® driver when installing the mounting screws. See Southco trade drawing J-H3-EM-68-100 for additional details.

Wiring Diagrams


The H3-EM-68-x00 contains two separate functional modules: the actuator module and proximity reader module. The actuator module controls and monitors the locking function of the swinghandle. The proximity module reads the contents of a compatible proximity card and converts it to Wiegand format.

These two modules operate independently of each other and require connection to an access control unit (**not provided**), as illustrated below, for the entire product to be fully functional.

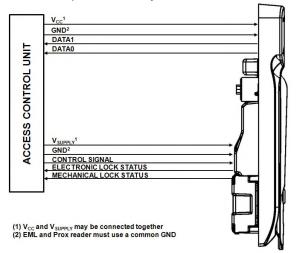




The actuator module of the swinghandle is accessed with a six-position connector on the rear of the unit, shown below.

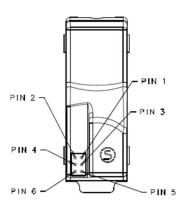

Pin	Description	Note		
1	V_{GND}	ground (must be same as proximity reader module)		
2	V _{SUPPLY}	12 to 24 VDC power supply input (may be connected to prox reader V _{CC} input)		
3	N/C	no connect		
4	Control Signal	command input (9VDC up to supply voltage, 100 milliseconds minimum)		
5	Electronic Lock Status	open collector output (rated for V _{SUPPLY} , 100mA max. load)		
6	Mechanical Lock Status	open collector output (rated for V _{SUPPLY} , 100mA max. load)		

 The proximity reader module of the swinghandle is accessed with a four-position connector attached to a harness connected to the module's circuit board. The module's connector pinout is:



Pin	Wire Color	Description	Note
1	Black	GND	ground (must be same as
			actuator module)
2	Red	VCC	12 to 24VDC power supply input
			(may be connected to EML
			V _{SUPPLY} input)
3	Green	DATA0	DATA0 output
4	White	DATA1	DATA1 output

NOTE: The mating connectors/harnesses are not provided with the H3-EM-68-x00. Refer to Southco trade drawing J-H3-EM-68-100 for mating connector/harness requirements.

Control Input Signal

This signal is used to control the electronic lock slide position.

- for UNLOCKED position: Supply 9VDC minimum (do not exceed supply voltage) for at least 100 milliseconds. The lock will remain unlocked for as long as the signal is present, or a minimum of 3 seconds. Signal timing can typically be adjusted at the access control device. The control signal current draw is less than 10mA.
- for LOCKED position: Supply an open contact or 0VDC (0 to 0.5V)

Electronic Lock Status Output and Mechanical Lock Status Output Signals

Electronic Lock Status Output Signal

This output will be LOW (GND) when the lock slide is electromechanically moved to the unlocked position. It will be in the open collector state (high-impedance) when in the locked position.

Mechanical Lock Status Output Signal

This output will be LOW (GND) when the handle is in the open position or when the keylock in the actuator is manually unlocked. It will be in the open collector state (high-impedance) when in the secured position.

▲ NOTE: These outputs are open collector outputs rated for V_{SUPPLY} with a maximum load of 100mA. To avoid damage to the H3-EM, do not exceed voltage and current ratings.

Status LED and Output Signals


The latch is equipped with a tri-color (blue/magenta/red) LED visible from the front of the latch. This LED provides a visible notification of the latch status. The different latch states are described below. Please refer to the Control Input Signal, Electronic Lock Status Output Signal, and Mechanical Lock Status Output Signal sections for further details on these signals.

Secured

The latch is securely closed, prohibiting access.

- The Status LED will be solid blue.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output is at its open collector state.

handle secured in housing, cam in locked position

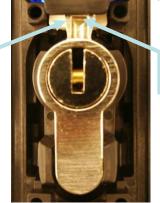

electronic lock slide in locked position

"Secured" State



Electronically Released

The electronic lock slide is in the unlocked position and the handle can be pulled open.

- The Status LED will alternate flashing blue/magenta.
- The electronic lock status output is 0V while the lock slide is in the unlocked position.
- The mechanical lock status output is at its open collector state.

handle secured in housing, cam in locked position



electronic lock slide in unlocked position


"Electronically Released" State

Mechanically Released

The latch is released by opening the handle or moving the cam from its lock position.

- The Status LED will flash blue.
- The electronic lock status output will be at its open collector state
 if the electronic lock slide is in the locked position. It will be 0V if
 the lock slide is in the unlocked position.
- The mechanical lock status output is 0V.

▲ NOTE: The lock sensor is an optical device that senses the presence of the lock pawl. Reflectivity of the lock pawl material can affect sensing. Use only Southco-supplied locks.

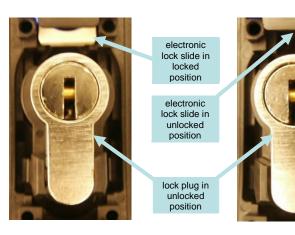


"Mechanically Released" State

Handle not Fully Closed

This is an interim state and may occur while closing the handle when the cam is not secured by the electronic lock slide. The latch is not fully secured during this state.

- The Status LED will alternate flashing blue/red if the cam is not detected. It will flash blue/red/red if the cam is detected, but the lock plate is not in the right position. This could be due to mechanical failure or tampering.
- The electronic lock status output is 0V if the lock slide is in the unlocked position. It will be at its open collector state if it is in the lock position.
- The mechanical lock status output is 0V if the cam is not detected. It will be at its open collector state if it is detected.

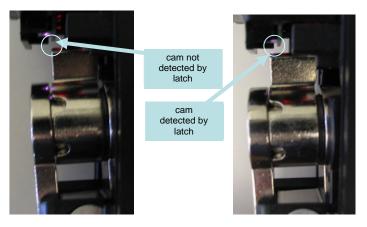

"Handle not Fully Closed" State

Electronic Lock Slide Error


The electronic lock slide does not respond to the command input signal.

- The Status LED will flash magenta if the latch is secured. It will alternate flashing red/magenta if the latch is mechanically released.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output will be at its open collector state if the cam is in its lock position. It will be 0V if the mechanical key is moved from its lock position.

Error Input Command Sequence

The H3-EM can accept an input command from an external controller to flash the status LED red three times. This feature can be used to indicate that an error event has occurred (e.g. unauthorized access attempt).

The control input signal needs to meet the timing requirements shown below to flash the status LED red.

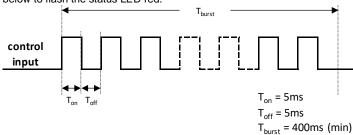



FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning: The equipment complies with RF exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Industry Canada Compliance Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le material brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.



For technical support of this product contact: info@southco.com or visit: www.southco.com or visit: www.southco.com or visit:

POZIDRIV® is a registered trademark of the Phillips Screw Company